

microHDMI

SD card

GND	GND
GND	292
164	322
196	260
100	326
68	6
294	36
324	38
356	132
4	1
354	289
2	321
32	33
290	353
66	65
96	3
34	97
64	0
46	320
14	352
76	8
44	358
106	162
134	256
166	194
104	226
74	224
12	192
42	130
10	160
72	98
40	66
102	288
70	GND
GND	GND

Hirose

GND	GND
GND	325
227	355
78	357
79	5
108	37
109	67
110	161
230	99
262	193
198	131
199	225
111	163
228	257
229	195
258	15
259	47
7	45
69	75
101	77
133	107
231	13
263	11
293	43
323	105
261	135
291	167
295	165
327	197
359	41
9	73
39	71
35	103
129	GND
GND	GND

view from the top of the Pixie

Captive
screw