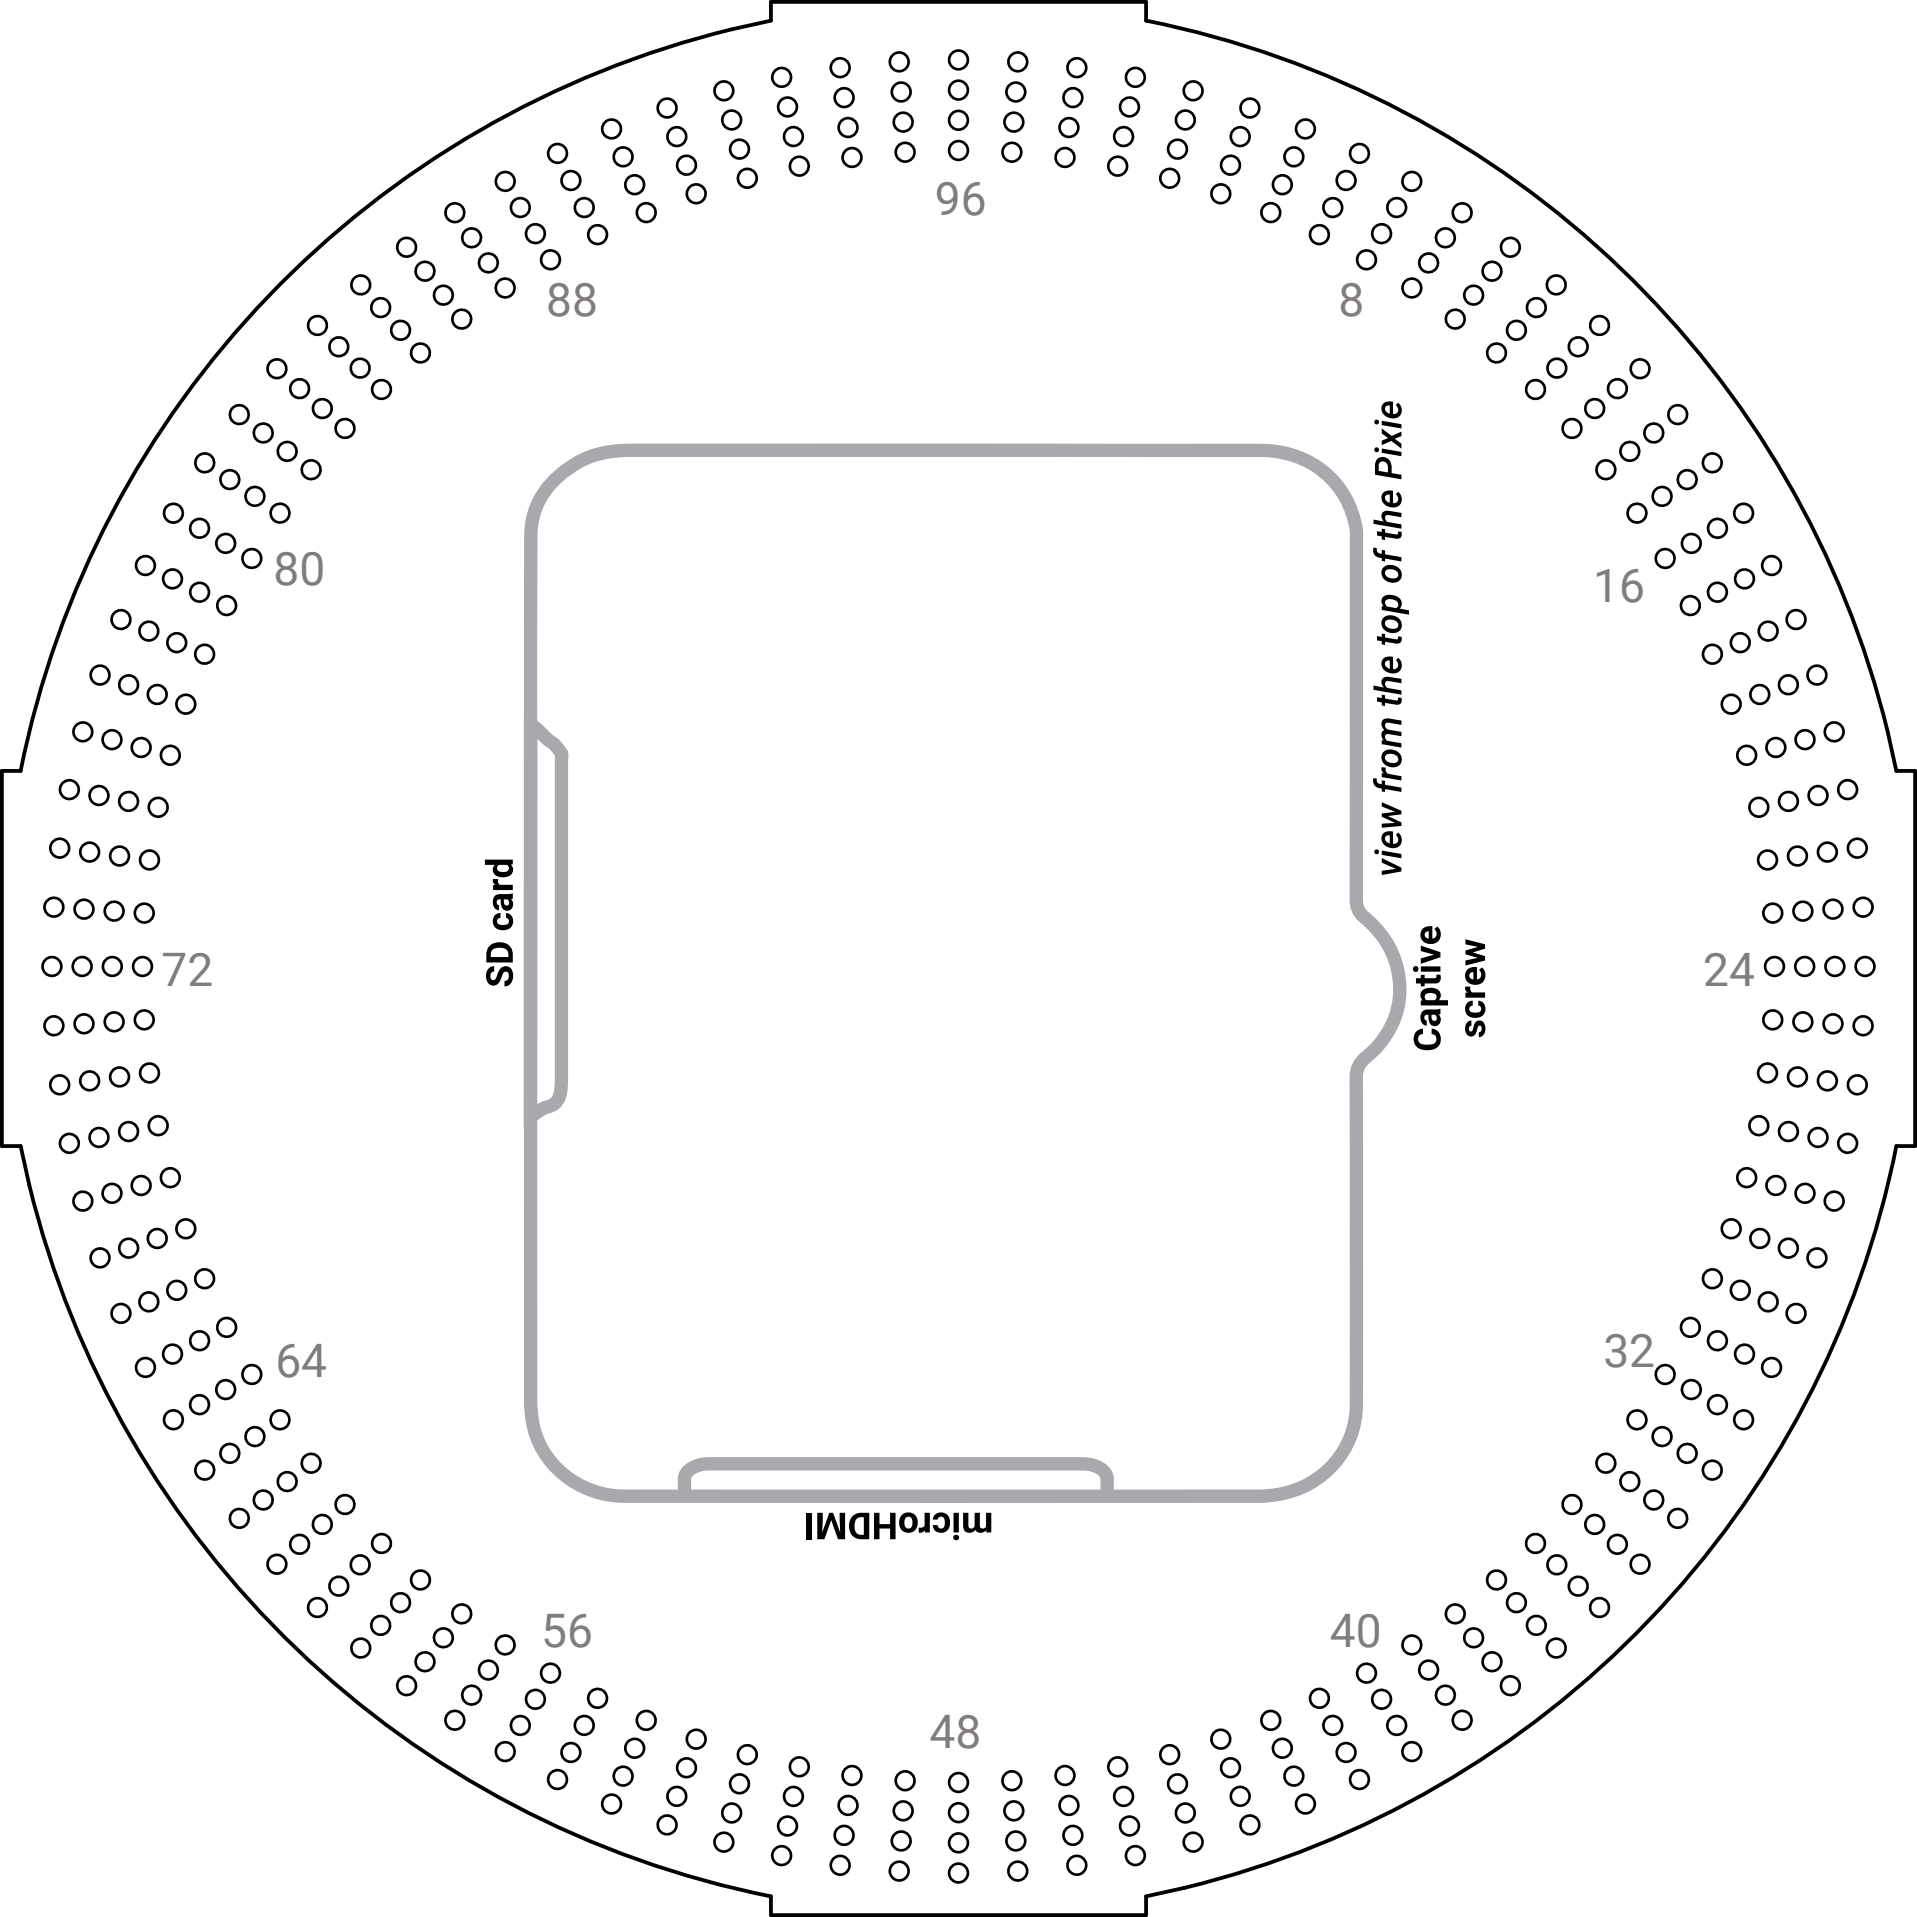
96
8
16
24
32
40
48
56
64
72
80
88
view from the top of the Pixie
SD card
Captive screw
microHDMI