

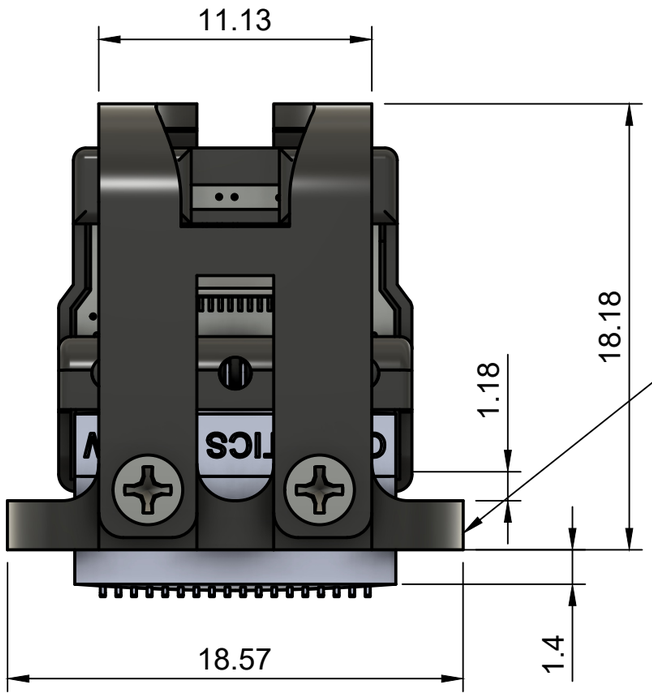


Base: cemented around omnetics implant

Bracket:: sits on the ultraflexible cable and holds the MM32 down.
Is screwed to the base with 4 #0-80 screws

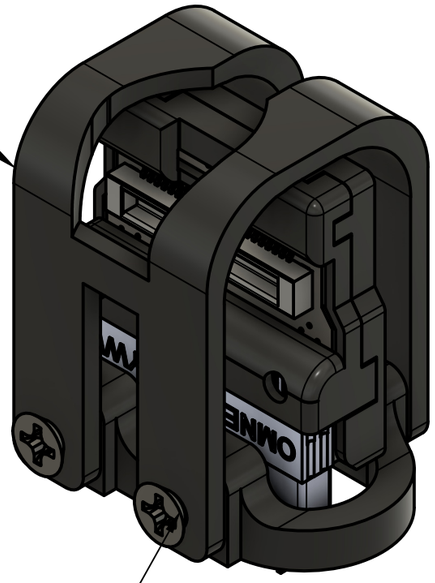

4x #0-80x$\frac{1}{8}$"

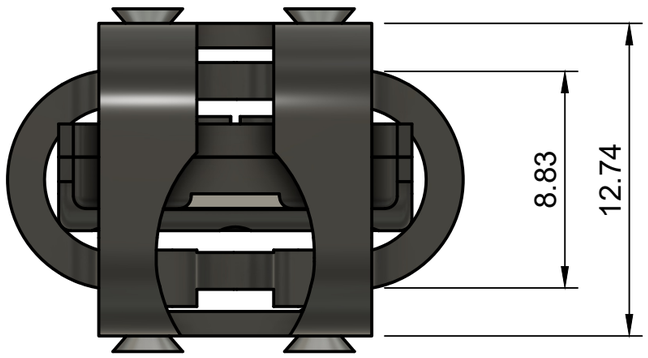

Dept.	Technical reference	Created by	Approved by
		Daria Genzel 6/13/2025	
		Document type	Document status
		Title: mm32_bracket_v1	DWG No.
			Rev. / Date of issue / Sheet: 1/1